




CUTTING Coroplast

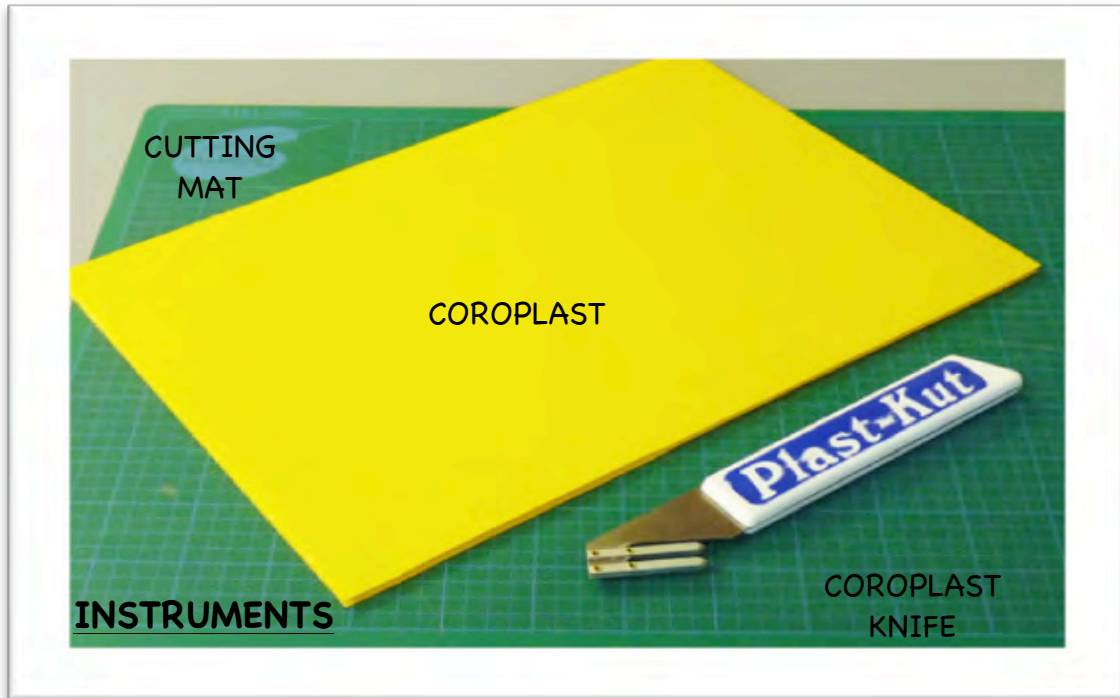

1. Insert the lower blade into a flute.
2. Hold the part to be cut.
3. Hold the knife firmly.

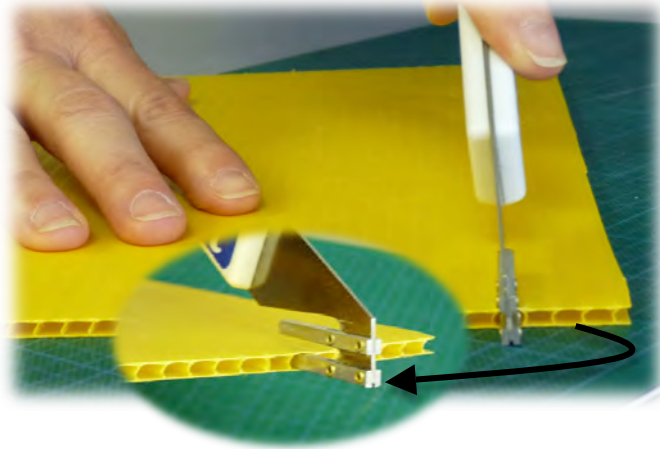


This method allows you to cut
a single layer of the flute.

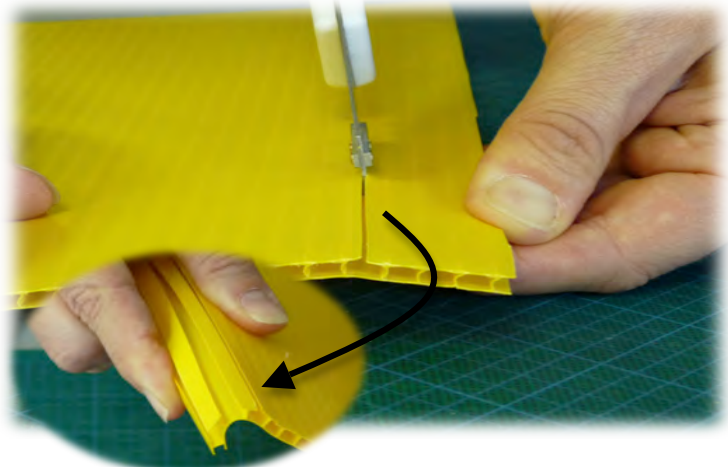


CUTTING Coroplast (continued)

1. Insert the upper blade into a flute.
2. Hold the part to be cut.
3. Hold the knife firmly.

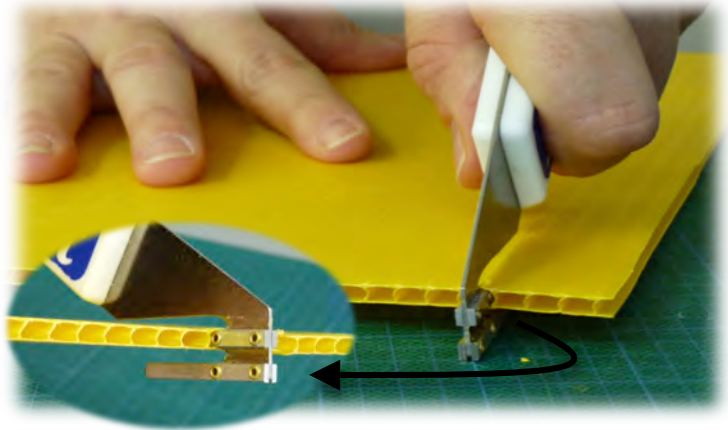

This method allows you to cut both layers of the flute.

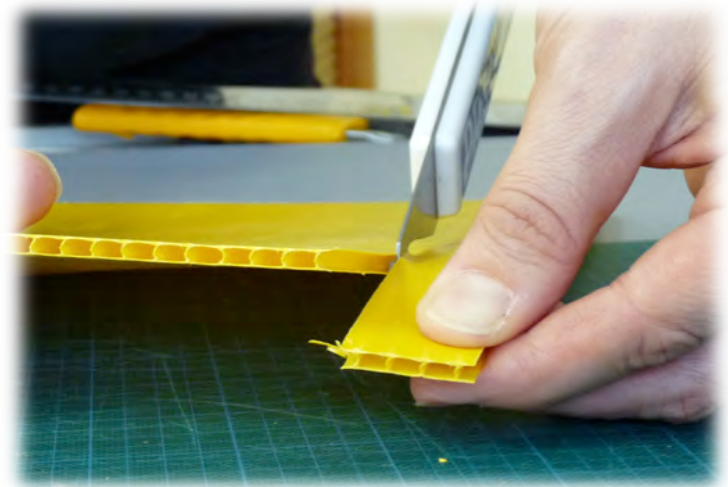

*Using the Coroplast knife only allows you to cut in the direction of the flutes.

*For cuts perpendicular or diagonal to the flutes, you must use the cutting technique with a retractable blade (utility) knife.